

Kenko

MOUNT ADAPTER

For Leica R-M


Instruction Manual

Thank you for purchasing this Kenko Mount adapter. Read this instruction manual carefully before use and be sure to use the mount adapter correctly.

Note: Be sure to read the "Safety Precautions" before use.

 Kenko Tokina Co., Ltd. 
<http://www.kenkoglobal.com/>
 KT Nakano Building
 5-68-10, Nakano, Nakano-ku, Tokyo 164-8616, Japan

Part names

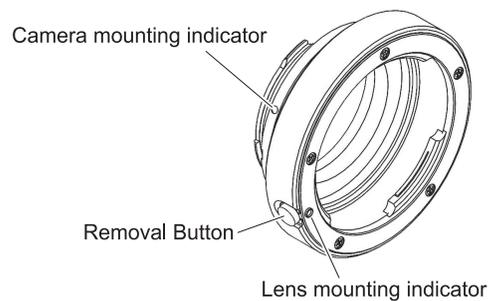


Preparation for mounting

- Turn off the digital camera power.
- When mounting the mount adapter, rotate it slowly and gently.

1. Mounting mount adapter to lens


Note: Always use both hands when mounting/dismounting the lens and mount adaptor.

After using the check gauge to make sure that the lens can be mounted, align the lens mounting indicator on the mount adapter to the lens mounting indicator on the lens, and rotate the lens in the direction of the arrow until it clicks.

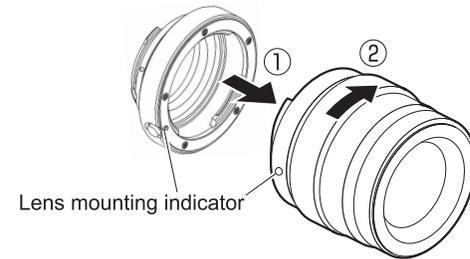

2. Mounting to camera

Align the camera mounting indicator on the mount adapter to the lens mounting mark on the digital camera, then rotate the mount adapter with the lens attached in the direction of the arrow until it clicks.

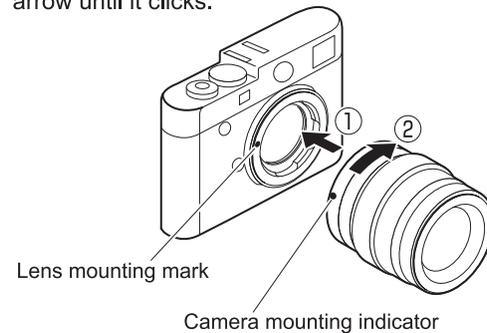

3. Setting up camera body

As for camera settings, refer to camera manual instructions.


Preparation for dismounting

- Turn off the digital camera power.
- When dismounting the mount adapter, rotate it slowly and gently.

4. Dismounting from camera


Note: Always use both hands when mounting/dismounting the lens and mount adaptor.

While pressing and holding the lens removal button on the digital camera, rotate the lens with the mount adapter attached in the direction of the arrow until it stops, and then dismount it.

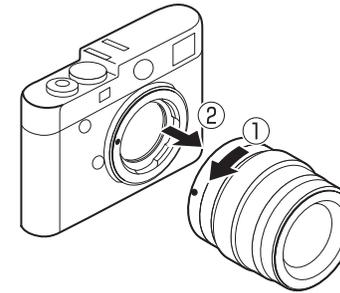

5. Dismounting lens from mount adapter

While pressing and holding the removal button on the mount adapter in the direction of the arrow, rotate the lens in the direction of the arrow until it stops and then dismount it.

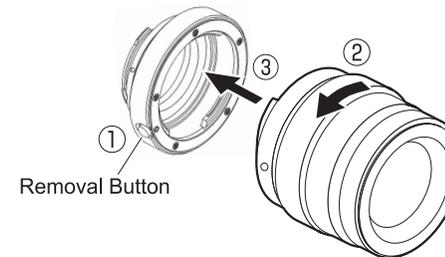

6. Handling Guidelines

- Before use, be sure to use the check gauge to check if the lens can be mounted.
- The actual focal length may differ from the displayed lens focal length depending on the lens being used.
- Do not use lenses other than the Reica R mount lens. Forcibly mounting a different type of lens may damage components.
- No warranty will be provided for any breakage or malfunction in the camera, lens, adapter or other accessories, etc. if an other mount adapter is used together with this mount adapter.
- Replace the lens in a location where there is little dirt or dust.
- Avoid using the mount adapter in a location where there is a lot of dirt or dust. Doing so may cause a malfunction.
- Be very careful not to drop or subject strong impacts to the mount adapter.
- To clean the mount adapter, gently wipe it with a clean dry cloth.
 - Do not use solvents such as benzine, thinner, alcohol, and kitchen detergent.
 - If the mount adapter is particularly dirty, soak a cloth in water, thoroughly wring out the cloth, wipe of the dirt and then immediately wipe dry with a dry cloth.
- Be sure to read the instruction manual supplied with your digital camera.