

REAL PRO CINEMATIC

REAL PRO CINEMATIC 4K HD Wide 0.6x

REAL PRO CINEMATIC 4K HD Tele 2x


Instruction Manual

Kenko

How to attach

Kenko REAL PRO Cinematic conversion lenses can be easily attached on smartphones and other supported devices by following the steps below:

- ① Place the mount attachment (without the conversion lens) on the camera lens of your smartphone or device, making sure to align its center with the center of the camera lens.

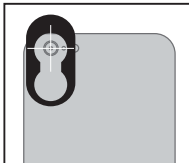

- ② Secure the mount attachment by rotating the lock screw completely, without forcing the rotation after it stops.



- ③ Keep your smartphone or device horizontally (screen upward), place the conversion lens on the lens mounting section and screw it on completely. (see image)
During this operation, hold the lens firmly to avoid accidental slips or falls.



- ④ Make sure again that the camera lens center and this conversion lens optical axis are aligned. If the optical axis is out of alignment, it may cause vignetting or a drop in image quality. If out of alignment, re-adjust the mount attachment so that its center is precisely aligned with the center of the camera lens while looking through the front part of the conversion lens.

Supported devices

The mount attachment of this conversion lens is compatible with smartphones or devices up to 11mm in width and whose max. distance from its edge to the center of its camera is no more than 35mm.